

TAKT™



T20 Cross Task Chair

Building Instructions

Important Notice

Only use the listed tools.


Do **not** use power tools.

Tighten in accordance with the building instructions.


Avoid over-tightening.

There is no need for strong force.

1x star base

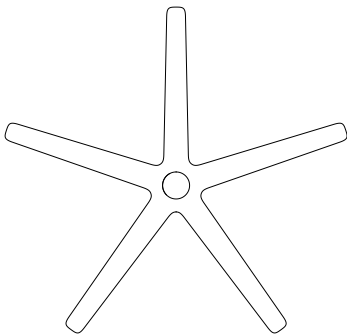

1x lever mechanism



1x gas spring




5x castors




1x backrest



2x backrest supports

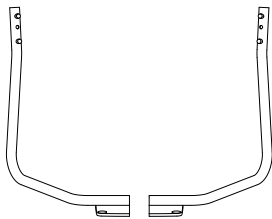

1x seat

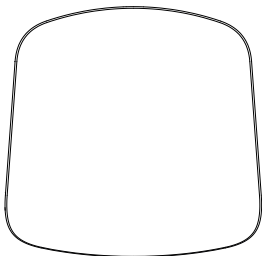

A 2x screws (20mm)
TT

B 6x washers
○○○○○○

C 4x screws (25mm)
TTTT

1x Allen key (SW4)



Product Information

‘T20 Cross Task Chair’ is a task chair designed for indoor use. The chair is tested according to EN-16139 - L1.

Weight

7,9 kg

8,3 kg with upholstery

Materials

Seat and back: Moulded plywood

Surface treatment: Water based lacquer or oil

Fittings: Steel

Backrest support: Powder coated steel

Lever mechanism: Plast

Gas spring: Powder coated steel

Star base: Powder coated aluminium

Castors: Plast and steel

Upholstered version

Seat pad: Ecolabelled leather or textile, plywood.

Foam: OekoTex class 1 certified

UK version: Foam contains flame retardants melamine and TCPP and has been tested according to “BS5852 part 2 ignition source 5 crib”.

OekoTex class 2 certified

Tests & Declarations



The chair has passed the furniture test EN-16139 - L1

The chair is not treated with or containing disinfective biocides.




The mark of
responsible forestry

Dimensions

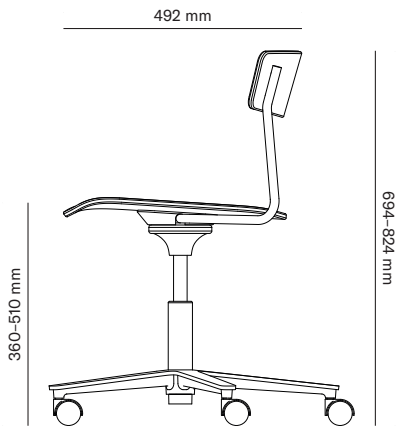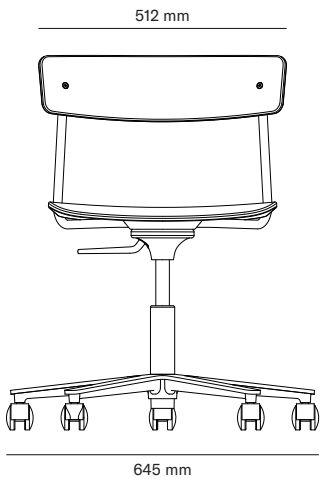


Important!

Make sure the screws easily grip the thread. Then tighten all screws.

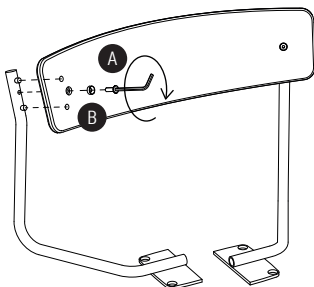


6



Optional


The lever can be positioned either on the right or left side.

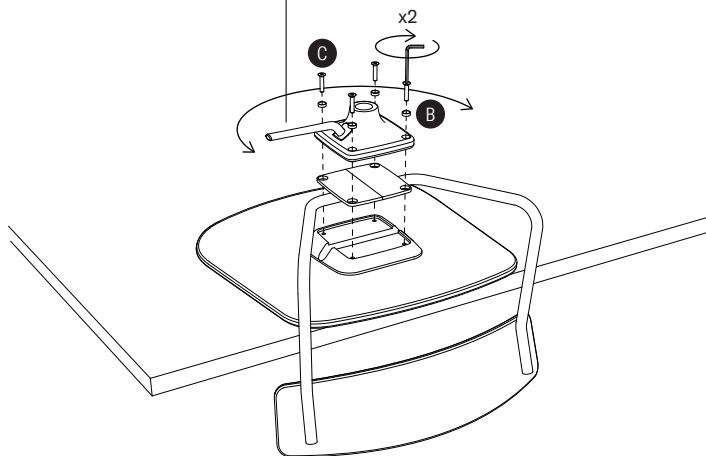


Important!

Turn all screws **ONLY** two rounds. Make sure the screw easily grips the thread. When all screws grip the thread tighten all screws.



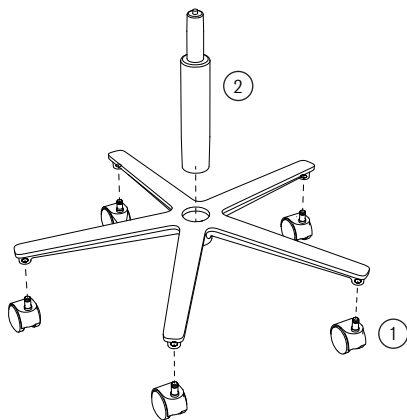

Push castor pins into holes in star base.
Then place gas spring in center hole.

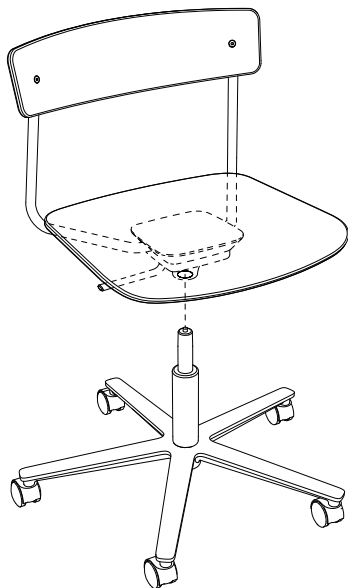

Place hole in lever mechanism on top of gas spring.
Then sit on seat to push parts firmly together.

Additional Information

TAKT provides an extended warranty of 5 years on 'T20 Cross Task Chair'.

Warranty

TAKT provides an extended warranty of 5 years on 'T20 Cross Task Chair'. The warranty covers breakage of components and damage occurred because of deficient craftsmanship under normal use.

The warranty shall lapse if the product shows signs of inappropriate use or other physical damage. The warranty does not cover wear or damage to upholstery, gliders, wheels, surfaces and the like.

Maintenance

TAKT maintenance guide is accessible on our website

[www.taktcph.com/
product-care/](http://www.taktcph.com/product-care/)

Spare Parts

TAKT offers spare parts for 'T20 Cross Task Chair'. Spare parts are available from TAKT without charge for a period of 5 years from the date of purchase if the parts are found to be faulty during normal use. If the parts are damaged by misuse spare parts can be bought from TAKT.

TAKT always strives to deliver spare parts to you in the fastest and most efficient way in order for your furniture to return to a functional condition.

Please contact TAKT for inquiries regarding spare parts.

Recycling & Disassembly

We hope that your TAKT product will serve you well for many, many years.


If you at one point want to recycle it, please separate it into components for sorting.

Untighten screws by turning the Allen key counter clockwise to separate the different parts.

Metal parts, plastic parts and wooden parts can be delivered to a suitable recycling facility and be recycled.

Mixed material parts can be delivered to a recycling facility for suitable disposal.

info@taktcph.com

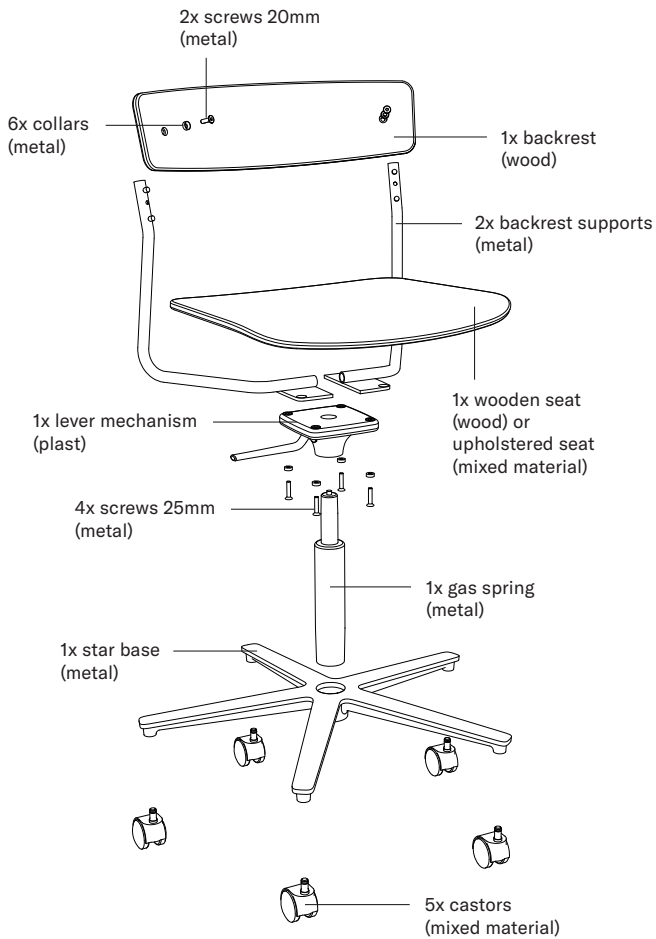

TAKT[™]

taktcph.com